LSV2-10-2 NCP



DESCRIPTION

A solenoid operated, 2-way, 2-position, normally closed,

OPERATION


When de-energized, the valve acts as a check valve, allowing flow from 1 to 2, while blocking flow from 2 to 1.

When energized, the poppet lifts to open the ② to ① flow path.

Operation of Manual Override Option

To override, push button in, twist counterclockwise 180° and release. In this position, the valve will remain open in a detented condition. To return to normal operation, push button in , twist clockwise 180° and release. Override will be detented in this position.

SYMBOL

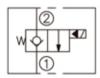


SPECIFICATIONS


(Max. Operating Pressure):	207bar
(Flow):	See PRESSURE DROP VS.FLOW graph.
(Internal Leakage):	3 drops/min max. at 207bar
(Temperature):	-40°F to +212°F(-40°C to +100°C)
(Coil Duty Rating):	Continuous from 85% to 115% of nominal voltage
(Filtration):	See page N-1
(Fluids):	Mineral-based fluids with viscosities of 7.4 to 420 cSt.
(Cavity):	10-2,See page M-2
(Dady Material)	

(Body Material):

6061-T6 aluminum alloy rated to 207bar, Steel & Ductile iron rated to 350bar

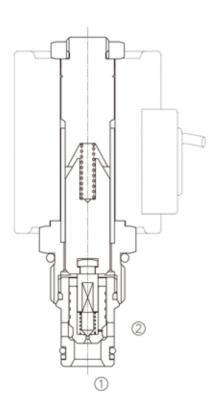

PRESSURE DROP VS.FLOW

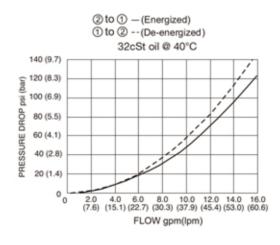



TO ORDER



1 LSV2= Solenoid Valve

2 Size 10=10

3 Flow Path 2=

4 NC= Normally Closed

5 P= Poppet

6 Blank= None M= Manual Override 7 Voltage

1=12 **VDC** 2=24 **VDC** 3=110 VAC 4=220 VAC 5=10 VDC

8 Coil Connection

D= Double Lead

H= Hirschmann

C= Conduit

ER= Deutsch Connector(Water-proof Coil)

9 Body Porting

Blank = None

6T=SAE 6

8T=SAE 8

3G=G 3/8

4G=G 1/2

S= Single Lead

B= Double Spade

Other Porting Is Available

INSTALLATION DIMENSIONS

Coil Must Be Installed With Letter Up

Unit=Millimeters

